

Product Information

D800 ScreenTape®

Catalogue Number: ST102

Storage: 4°C

Description:


The D800 ScreenTape should be used with D800 Ladders and Loading buffers in the Lab901 TapeStation™. ScreenTape consists of an acrylamide based matrix that has been optimised to separate DNA fragments between 25 and 800 base pairs.

Recommended Procedure:

Place the tubes/microtitre plate containing the D800 ladder and your samples mixed with D800 Loading Buffer into the TapeStation™ along with fresh tips. Insert the D800 ScreenTape, close the lid and press Start.

Quality Control:

Please contact Lab901 with batch information for the relevant certificates of analyses.

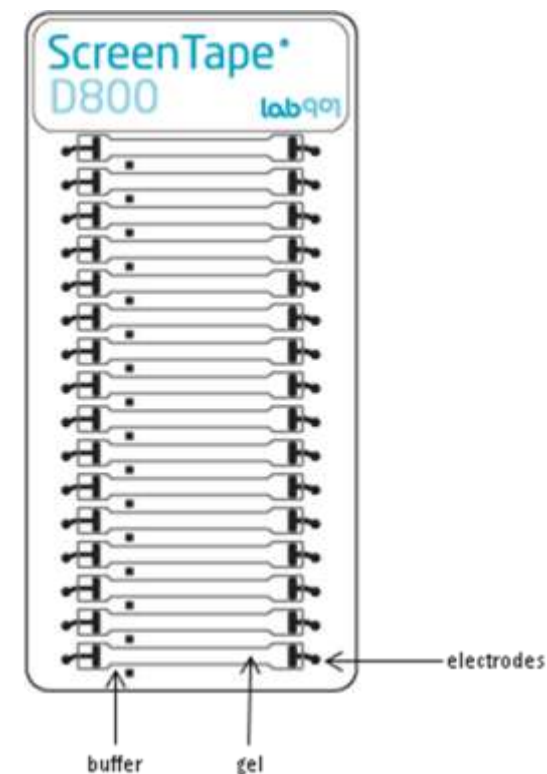

Stylised diagram of D800 ScreenTape